

Aegis Series



TABLE OF CONTENTS	
Features	3
Specifications	4
Physical Diagrams	5
What comes with Aegis	7
Switch and Controls	8
OSD Settings	9
Installation	19
External Power Adapter	21
MCR Installation	22
MCR Parameter Modification	25
VFD Customer Display Installation	27
Trouble Shooting	32

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer. In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

FEATURES

- Cast aluminium front and base construction - rugged and durable
- Compact size and small footprint - fits where space is at a premium
- Standard VGA for easy interface to a standard PC VGA port.
- Flicker-free LCD display - easy on the eyes
- Low radiation - poses less hazard to user's health
- Power-thrift - environmentally friendly
- Tiltable display - adapts to placement, user position and lighting conditions
- VESA mounting holes - fits optional tilt/swivel wall mount fixtures
- Flexible power options - tap power from the computer or use an external adapter
- Point of sales industry specific options - touch screen, VFD customer display, magnetic card reader

SPECIFICATIONS

Model	A152TA	A121TA	A122TA
Display Panel Type	TFT LCD	TFT LCD	TFT LCD
Display Area	15.00”	12.1”	12.1”
Display Resolution	1024 x 768 XGA	800X600	800X600
Colour Resolution	262,144	16.7M	16.7M
Pixel Pitch	0.297x 0.297	0.306X0.306	0.306X0.306
Brightness	350 nits (typ)	150 nits (typ)	300 nits (typ)
Contrast Ratio	400:1 (typ)	150:1 (typ)	200:1 (typ)
Response time	16ms	40ms	20ms
Interfaces cables & connectors		Standard VGA for use with a Video Graphic Adapter	
		Model specific options:- PS/2 for MCR & 32 Keyboard, RS232 for touch screen, DC power.	
Energy Saving Mode		VESA DPMS compliant	
Power Supply		A152TA=12v @ 4A and A12xTA=12v @2A	
Weight		A152TA=6.4 kg and A12xTA= 5.5 Kg	


Please note that the "x" denotes model specific options, e.g. A121TA standard brightness and A122TA is high brightness.

The "T" means with Touch Screen, and the "A" stands for Analog.



For Model A12xTA, it is recommended to use 800X600 @ 60Hz for display adapter settings. For Model A152TA, it is recommended to use 1024x768 @ 60-75Hz for display adapter settings. Other resolutions would function, but possibly at degraded display quality.


PHYSICAL DIAGRAMS

A12xTA

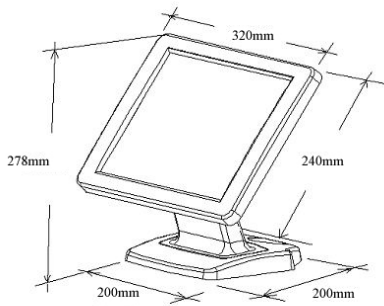

A152TA

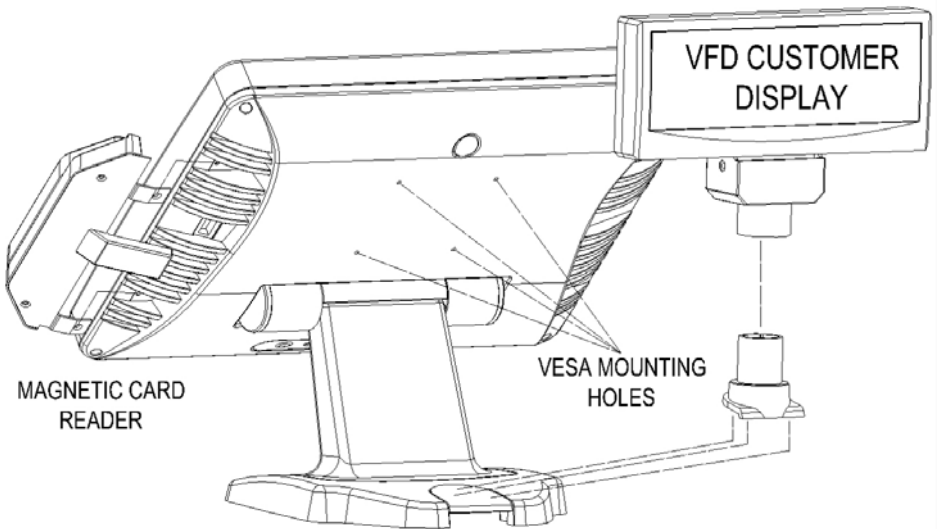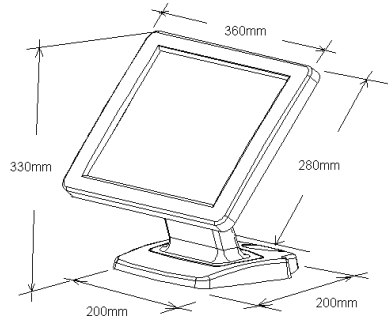


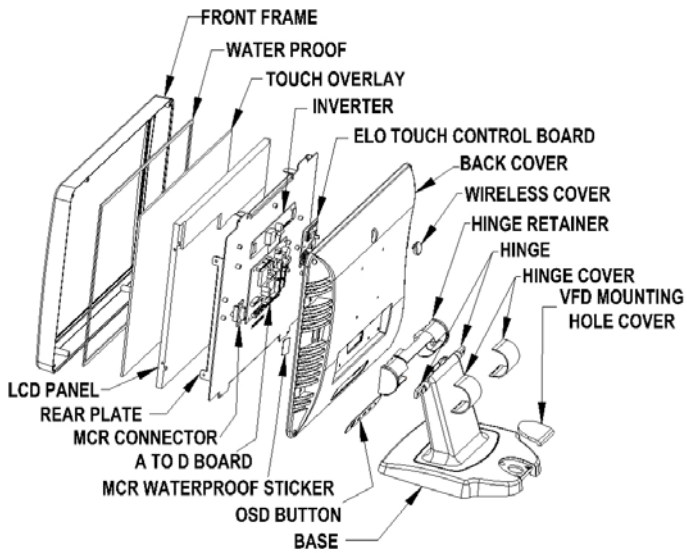


WHAT COMES WITH AEGIS

Upon unpacking, please inspect to make sure all items are in place and in good condition. If there is any damaged or missing item, please contact your dealer immediately.


The following items come as standard

1. LCD Display unit with tilt base
2. Power bracket
3. DC power cable 9000XC1594
4. User's manual
5. Driver CD for Elo touch screen

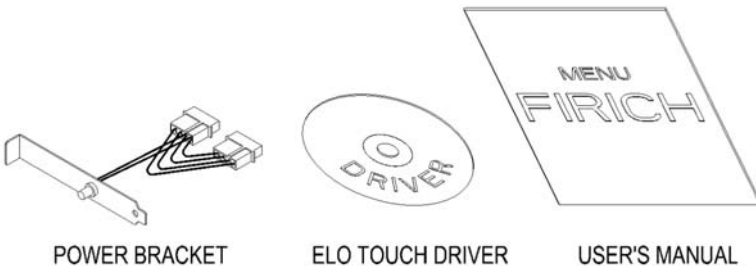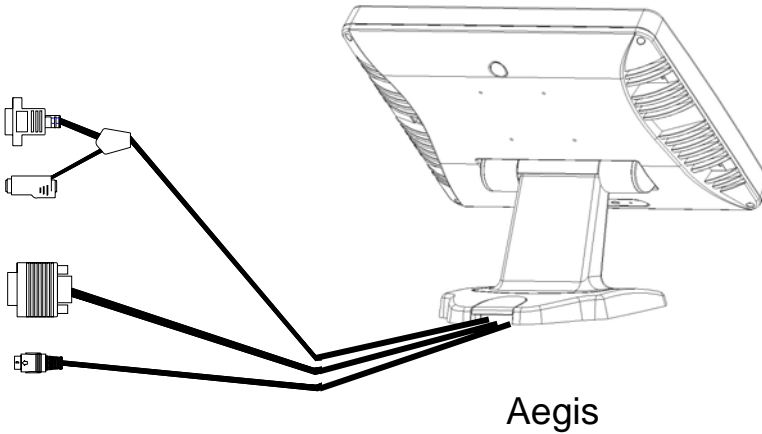

SWITCH AND CONTROLS

Model A152TA / A12xTA has built-in OSD (on screen display) controls to adjust various display parameters. The control buttons are located on the bottom of the back cover.

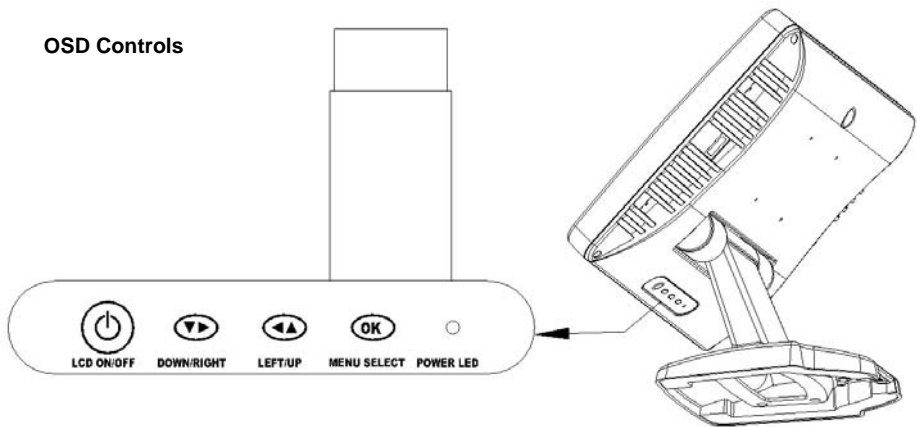

OSD SETTINGS

There are four buttons on OSD panel: Menu / Enter, Right, Left and LCD ON/OFF. The functions of these four buttons are as follows

Menu/Enter Button

Press it to open OSD window and enter user mode to do the function adjustment or selection of the item. It may have many levels in one item. As you select this kind of item, you will enter the next level and see the sub-items.

Right Button

Press it to Scroll item Right or to decrease the value or to switch the selected item to another.

Left Button

Press it to Scroll item Left or to increase the value or to switch the selected item to another.
).

LCD ON/OFF Button

Control LCD ON/OFF button

OSD Menu Structure

Main Menu

If push the “MENU” key the screen will appear this main menu page, you can use the “UP” or “ADJ. +” AND “Down” or “ADJ. –” key (appear Pic1) to select the function you need.




Pic1

The end of this page will be shown the working resolution and frequency.

A.Auto Adjust

If select this function on OSD MAIN MENU and push the MENU key.
(appear Pic2)

 In this function, that will be activated the auto adjusting for the picture.




Pic2

B..BRIGHTNESS

If select BRIGHTNESS function on OSD MAIN MENU and push the MENU key.

(appear Pic3)

You can push ADJ+ or ADJ- key to increase or decrease backlight current of the inverter.

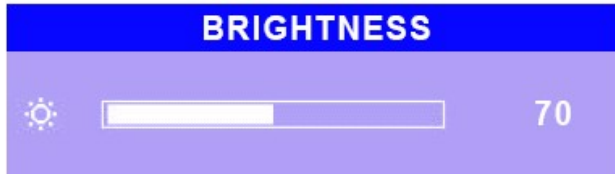

Pic3

C. CONTRAST

If select CONTRAST function on OSD MAIN MENU and push the MENU key. (appear Pic4)

You can push ADJ+ or ADJ- key to increase or decrease video gain of the picture.



Pic4

D. Screen Settings

If select DISPLAY ADJUST function on OSD MAIN MENU and push the MENU key.

In this mode, that will into the sub-page (appear Pic5) to adjust display's function of the picture.



Pic5

D-1 H-POSITION

In this function, than could adjust the picture in horizontal position.




D-2 V-POSITION

In this function, than could adjust the picture in vertical position.




D-3 CLOCK

In this function, than could adjust the clock frequency of the picture.

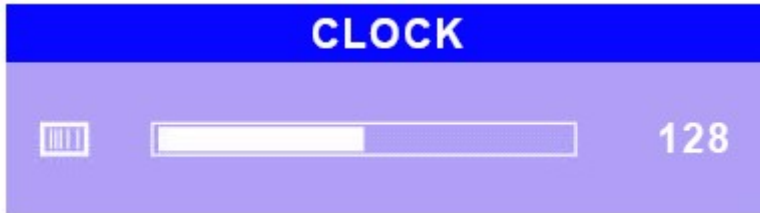


D-4 PHASE

In this function, than could adjust the clock phase of the picture.

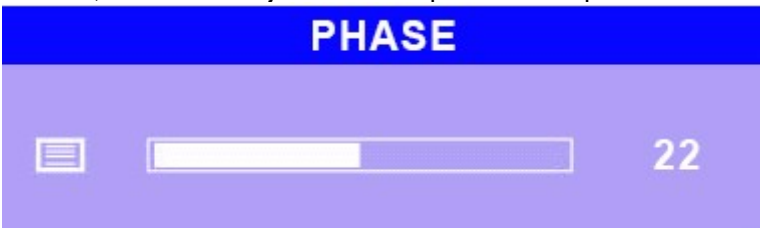

D-5 QUALITY

In this function, than could adjust the scanning filter of the picture.

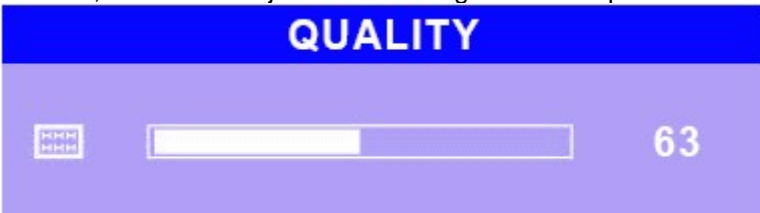

E. COLOR TEMPERATURE

If You select COLOR TEMPERTURE function on OSD MAIN MENU and push the MENU key.

In this function, that will into the sub-page (appear Pic6) to adjust the display

color of the picture



Pic 6

E-1 : 9300K : In this mode , than could recall the value for the color temperature of 9300K.


E-2 : 7500K : In this mode , than could recall the value for the color temperature of 7500K.

E-3 : 6500K : In this mode , than could recall the value for the color temperature of 6500K.

E-4 : AUTO GAIN : In this mode , than could active the auto white balance adjusting.


E-5 RED

In this function, than could adjust the red gain in user's mode of color temperature.

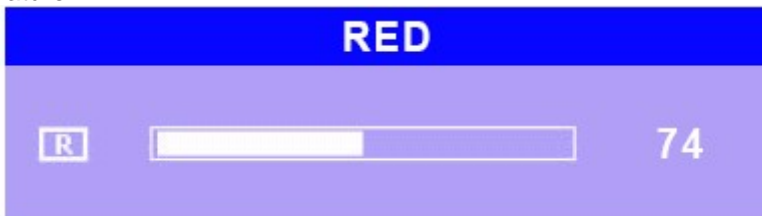


E-6 GREEN

In this function, than could adjust the green gain in user's mode of color temperature.

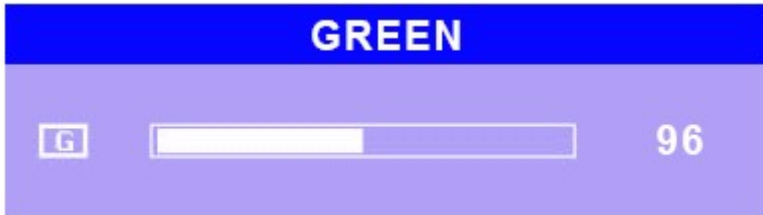

E-7 BLUE

In this function, than could adjust the blue gain in user's mode of color temperature.

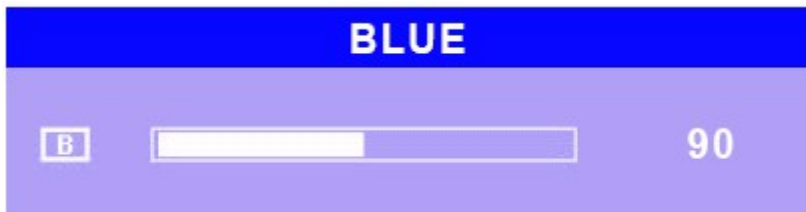

F. LANGUAGE

In this mode, that could into the sub-page (Pic7) to select the language for display.



Pic 7

G.OSD DISPLAY

If select OSD DISPLAY function on OSD MAIN MENU and push the MENU key.


this function will into the sub-page (Pic8) to adjust the display's function for OSD.



Pic8


G-1 : OSD H-POS

In this function, than could adjust the horizontal position of OSD display.

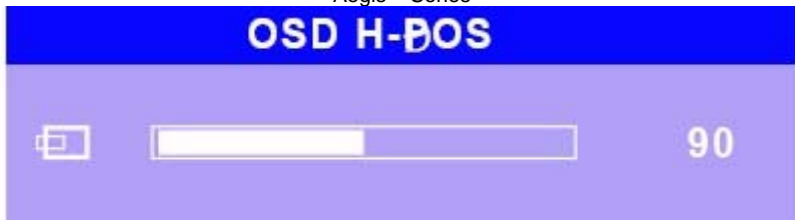

G-2 OSD V-POS


In this function, than could adjust the vertical position of OSD display.

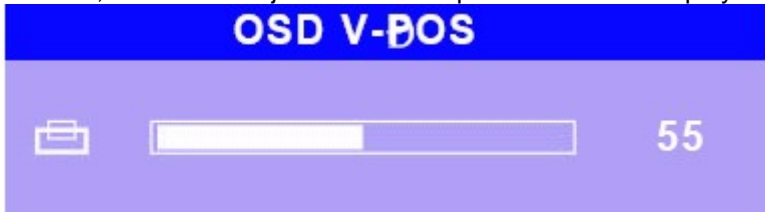

G-3 OSD TIMER

In this function, than could adjust the time of OSD display.

Except "0" is always display.

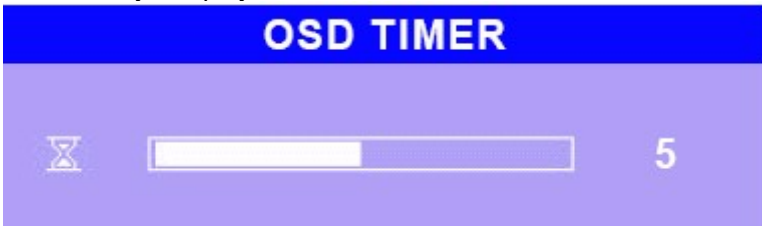

G-4 OSD TRANSPARENCY

In this function, than could adjust the transparency of OSD display



H. VGA / DVI INPUT

If select VGA/DVI function on OSD MAIN MENU and push the MENU key.
In this function, that will into the sub-page (appear Pic9) to select input source.



Pic9

H-1 : ANALOG INPUT : In this mode , than could select the input source from the VGA.


H-1 : DIGITAL INPUT : In this mode , than could select the input source from the DVI.

INSTALLATION

Model A152TA / A12xTA

This model uses a standard VGA interface.


1. Turn off the computer.
2. Put the **Aegis** on a steady surface.
3. Please refer to **Power Adapter** section for instruction on using an external power adapter and skip this step.
For powering from the computer through the **Power Bracket**:
 - a. Open the computer case.
 - b. Secure the **Power Bracket** to an unused expansion slot bracket location.
 - c. Connect the connector on the **Power Bracket** wire assembly to a matching one from computer power supply.
 - d. Close the computer case.
 - e. Connect the **Aegis Power Cable** to the connector on the **Power Bracket**.
4. Connect the **VGA Cable** to the VGA port on the computer.
5. For the unit with touch screen function, please connect the **Cable and DSUB9 Connector** to a COM port (RS-232C port) on the computer. Please note which port number it is connected to, this information is required for touch driver installation.
6. For units with MCR (magnetic card reader) option. Connect the **KB Cable** to the PS/2 keyboard port on the computer. If a keyboard is to be used, plug the connector from your keyboard into the spare female **KB Connector on the Aegis Keyboard Cable**.

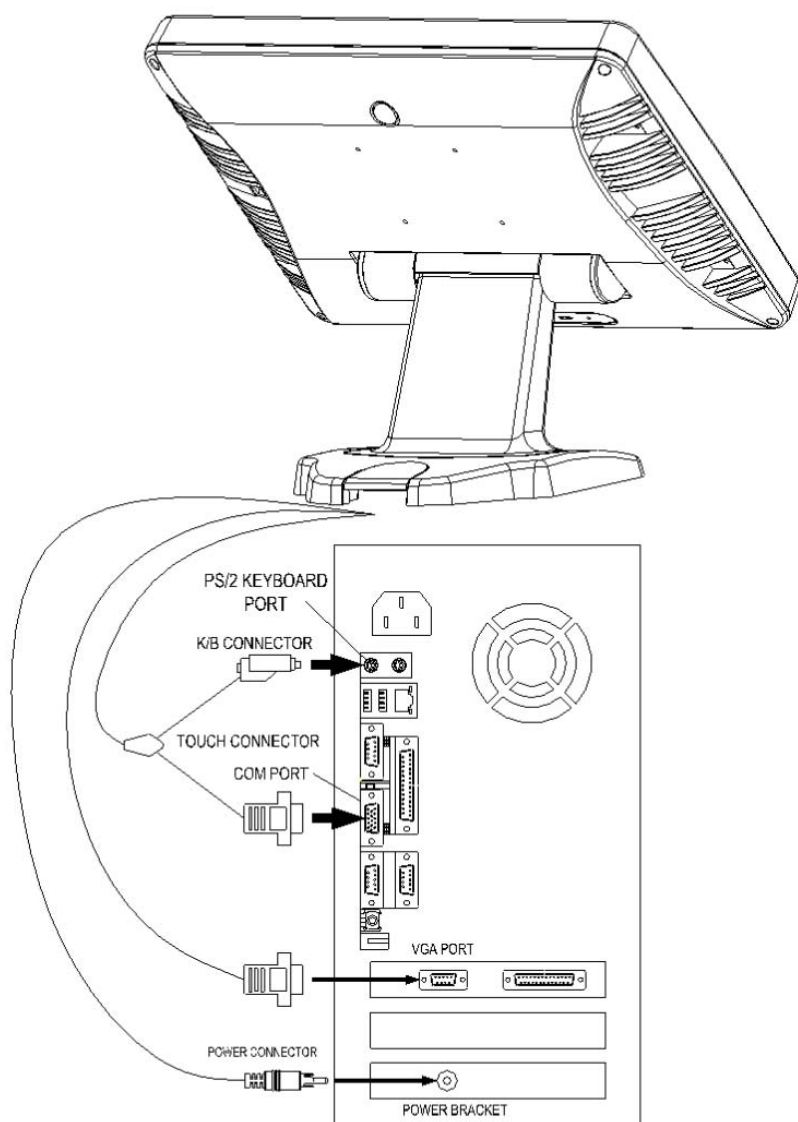

EXTERNAL POWER ADAPTER

For situation where the **Power Bracket** cannot be used to power the Aegis, an optional **External Power Adapter** can be used instead.


1. Check the items in the **External Power Adapter kit**, including a power adapter and an AC cord.
2. Turn off power to the computer and turn the **Aegis** power switch to off.
3. Plug one of the **Power Adapter** plug to the **Aegis Power Connector**.
4. Connect the AC plug of the **Power Adapter** to an AC outlet.

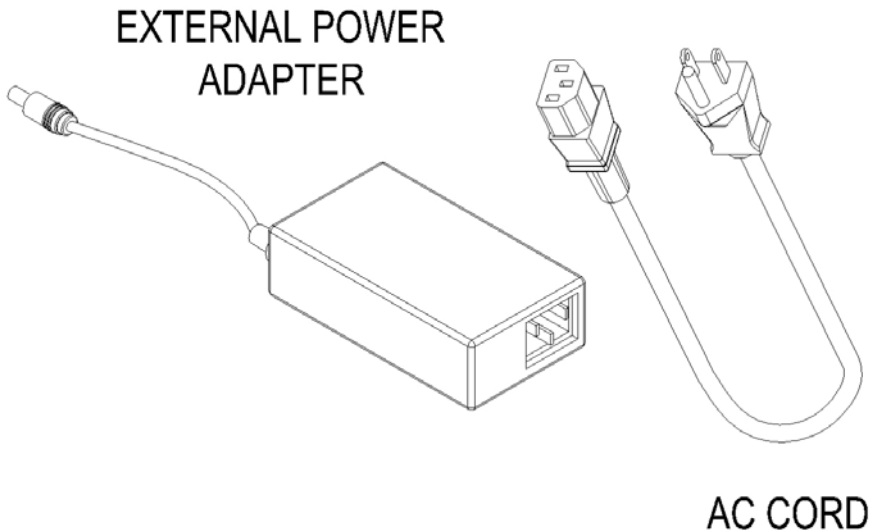


MCR INSTALLATION

The MCR (magnetic card reader) option can be fitted to the right side of **Aegis**. This option allows the reading of magnetic stripe card through keyboard input.

* If there is a need to modify the MCR parameters, such as country code and track combination, please follow the instruction in the section, **MCR Parameter Modification**.

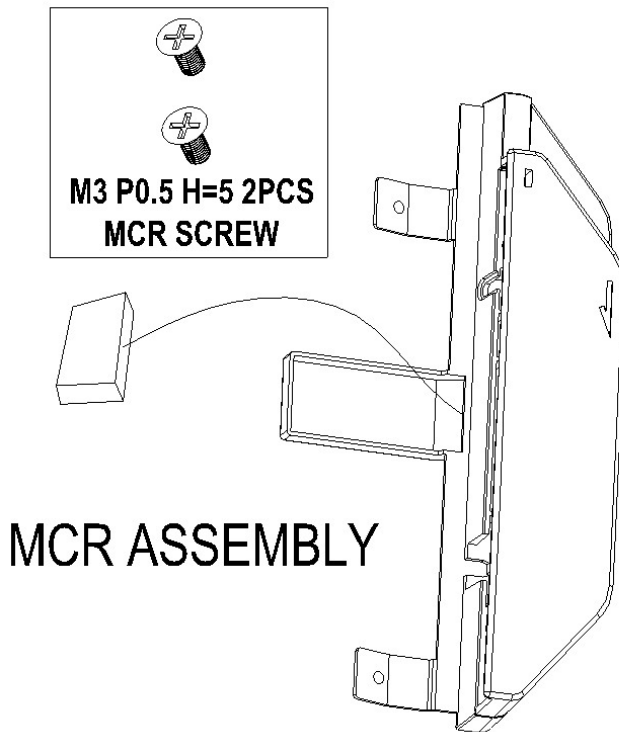


1. Check the items in the MCR option kit.
2. Turn off Power to the **Aegis** and the computer.
3. Unplug the loopback from the MCR socket. The MCR Socket is found on the right side on the back of the main Unit

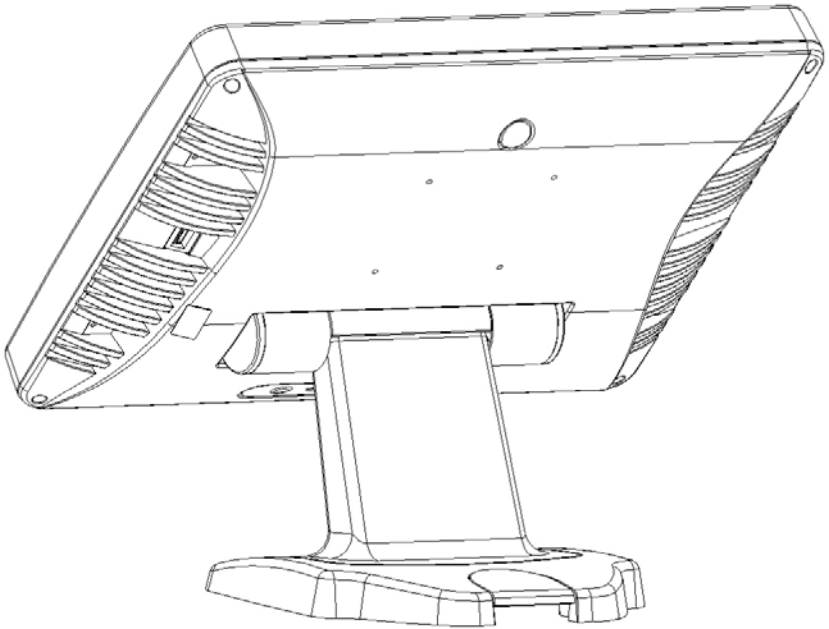

4. Attach the MCR Assembly to the main unit and connect the MCR cable to the MCR socket.
5. Secure the **MCR** to the main unit with 2 screws.
6. Turn on Aegis power.
7. Put the back cover on Aegis and secure with screws.

*** If the MCR is taken off, the loopback plug must be re-inserted. Otherwise, the keyboard would not function.**

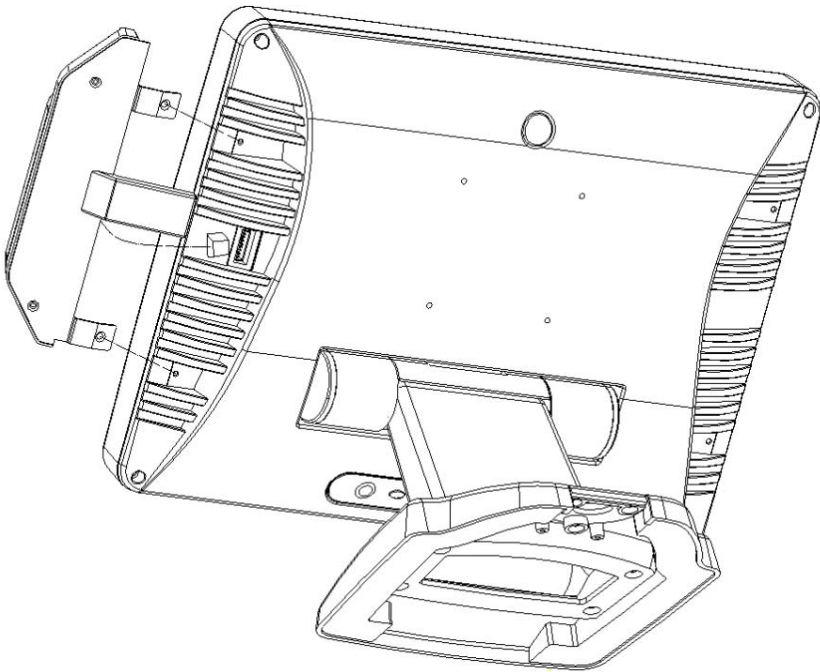

MCR Parameter Modification

This option is for users who need to customize the MCR parameters for a particular task.

Some of the useful parameters include:

The selection of country code, other than the default English.

The choice of track combinations.

The preamble/postamble codes.

The MCR parameters can be modified by using the supplied utility program. The utility can be found on the CD that came with your system in the “Utilities” folder. The program name is msr_v12_win.zip.

If you are upgrading an earlier system to include our MCR reader, then this utility can be located on our website at http://www.firich.com.tw/tech_drivers.htm in the section labelled as “MSR Utility”.

Unzip this file onto your system hard disk, in a folder of your choice.

It will also create 3 subfolders named Disk1, Disk2, and Disk3.

Change to the folder “**Disk1**” and run the “**Setup.exe**” program, and follow the simple onscreen instructions.


When the installation finishes, you will find that a new folder has been created in your “Program files” folder, labelled as “Decoder” with a subfolder named “S64 Decoder”

Now change folder to **C:\Program Files\Decoder\S64 Decoder** and run the program named “**S64_cfg.exe**”

When the program has loaded please select the **Magnic_Reader** menu item as in the following picture. By using the 3 top items listed; **Interface**, **Communication**, and **Miscellaneous**, you will be able to alter many of the parameters associated with the MCR unit.

When you have finished your modifications and are sure that they are set exactly how you want them to be, just click on the menu item **Transmit** to download the new parameter to the MCR unit. Please refer to the Help menu for any further assistance.

MCR Utility Reader

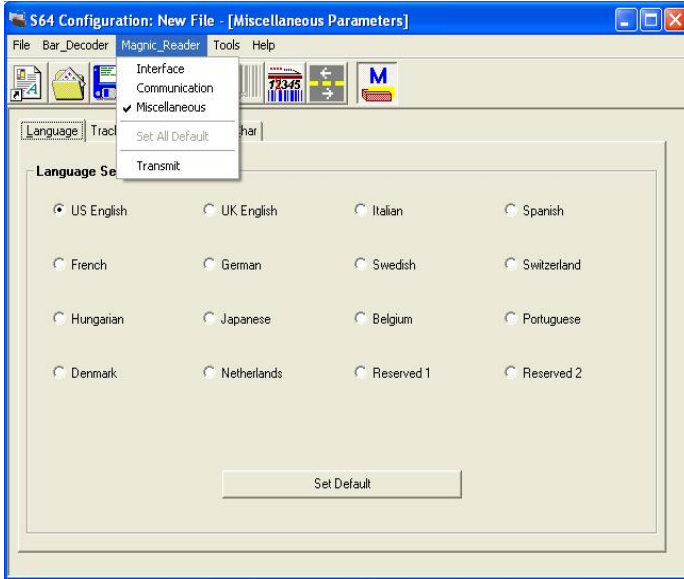

VFD CUSTOMER DISPLAY INSTALLATION

1. Check the items in the **VFD Customer Display Kit**.



VFD EXTENSION
TUBE



VFD MOUNTING
COUPLER



VFD MOUNTING SCREW




VFD SIGNAL CABLE




VFD Power Cable


2. Turn off power to **Aegis** and the computer.
3. Remove the VFD **Mounting Cover** from the **Base** of **Aegis**.

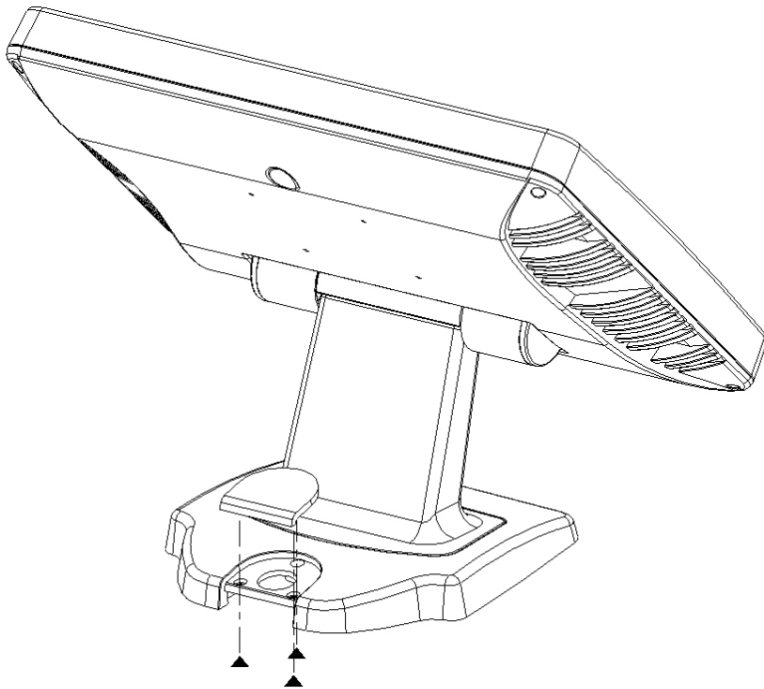


4. Secure the VFD Mounting Coupler to the Base with three VFD Mounting Screws.

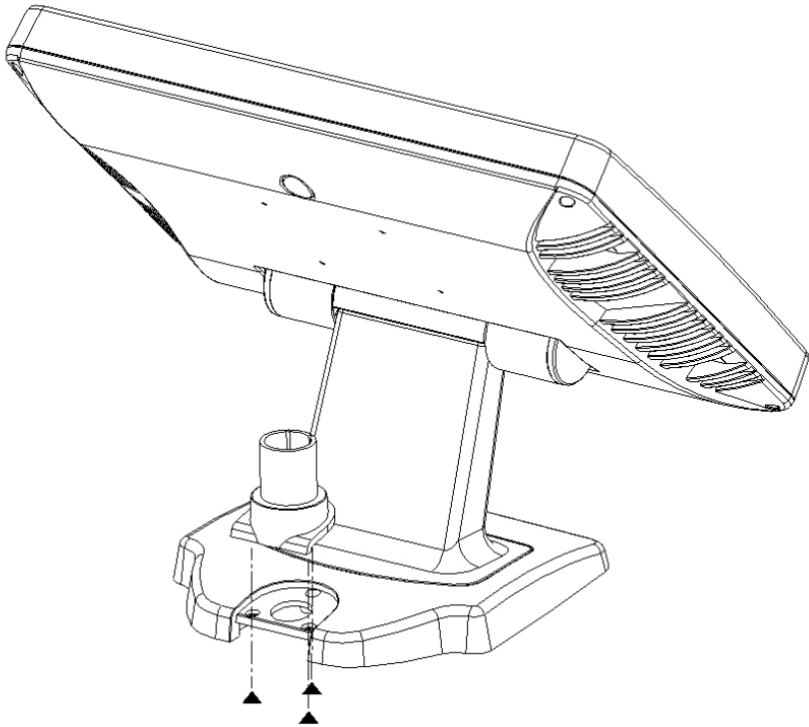

5. Thread the **RJ-45** phone connector of the **VFD Signal Cable** through the **VFD Mounting Coupler**, from the bottom of **Aegis**.
6. Plug the **RJ-45** connector to the **VFD Customer Display**.

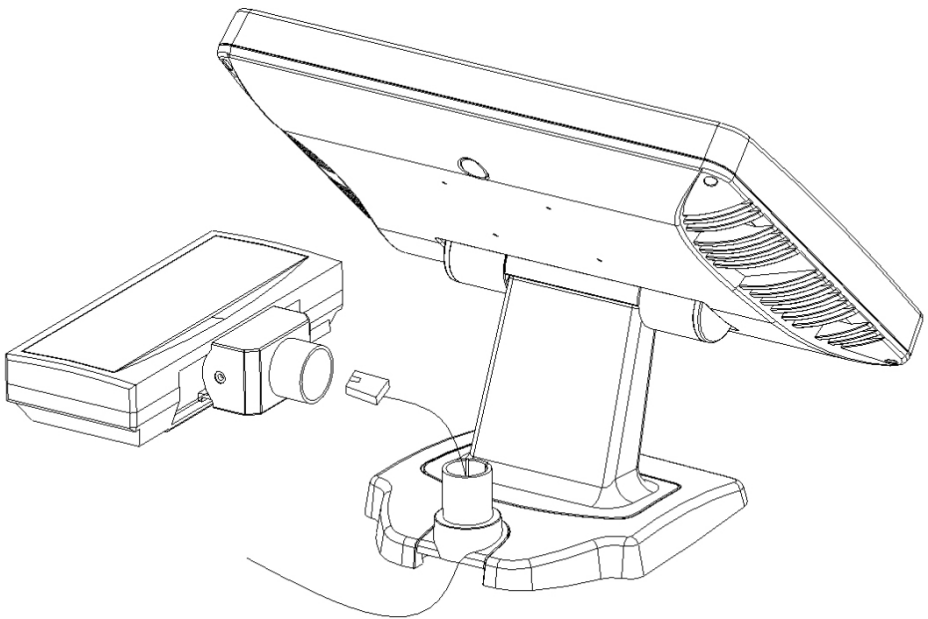

7. Fit the **VFD Customer Display** onto the **VFD Mounting Coupler**.
8. Plug the **DB9F** connector of the **VFD Signal Cable** to a COM port on the computer.
- 9a. For powering from the computer.
 - a. Plug the 3 pin connector of **VFD Power Cable** to one of the connector on the **Power Bracket**.
 - b. Plug the other end of the **VFD Power Cable** to the **DC Jack** on the **DB9F** connector of the **VFD Signal Cable**.
- 9b. For powering using an external AC adapter.
 - a. Plug the DC plug from the AC adapter to the DC Jack on the **DB9F** connector of the **VFD Signal Cable**.
 - b. It is Important that only an AC adapter made specifically for this **VFD Customer Display** is used. Other AC adapters, even with the same DC Plug, if used may cause damage to the Customer Display and, possibly, the computer as well.

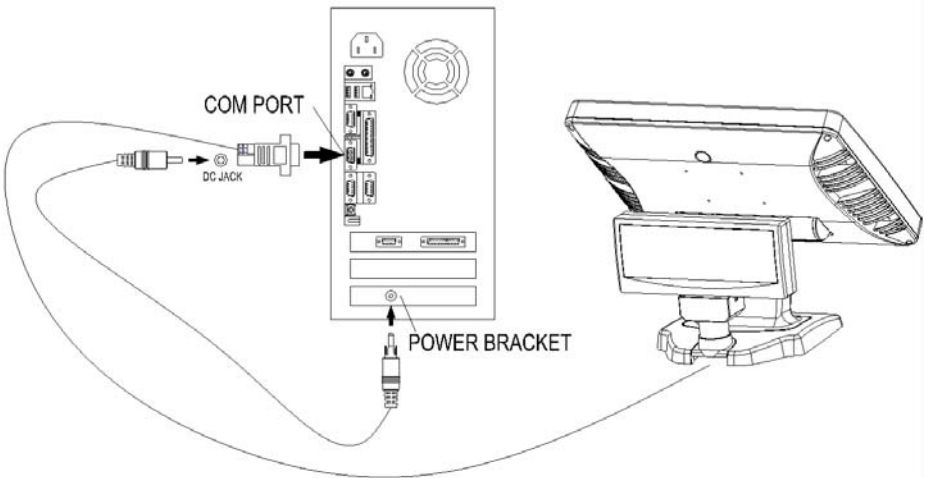

TROUBLE SHOOTING

When encountering difficulties in using this product, please follow the steps below. If the problem persists, please contact the dealer.

1. No picture on screen

- a. Check the AC cord and signal cable. Make sure they are properly connected.
- b. Check that the power button on the OSD panel is turned on.
- c. Check if the computer has entered energy saving mode.

2. Abnormal display colour

- a. Check if the signal cable is properly connected to the computer.
- b. For model A152TA / A12xTA, using the on-screen-adjustment mode to adjust the colour parameters.

3. Skewed or distorted display

- a. Check if the signal cable is properly connected to the computer.
- b. For model A152TA /A12xTA, using the on-screen-adjustment mode to adjust the geometric parameters.

4. Picture too large or too small

- a. Check if the display resolution is set correctly in the operating system.
- b. For model A152TA / A12xTA, using the on-screen-adjustment mode to adjust the size parameters.

5. Touch screen does not work

- a. Check if the COM port cable is properly connected to the computer.
- b. Check if the Elo touch driver has been loaded properly.
- c. Check if the COM port number is set correctly.

6. VFD Customer Display does not display properly

- a. Check if the power cable is connected properly.
- b. Check whether the power switch is turned on.

7. Magnetic Card Reader does not work

- a. Check if the KB Connector is properly connected to the computer's PS/2 port.

8. The card swipe character(s) is incorrect or shows random characters

- a. The country code parameter setting may need modification, please refer to the section, MCR Parameter Modifications.